

ETAU MACHINE BASIC

SAV 233.99BASIC





Serrage mécanique

Utilisation :

Pour travaux de fraisage et perçage

Exécution :

- Corps en fonte
- Mors en acier trempé rectifié

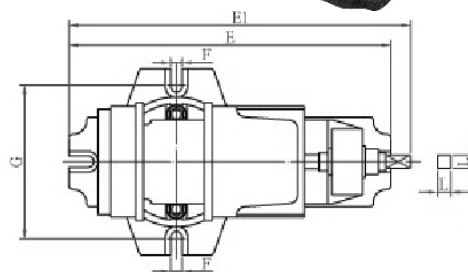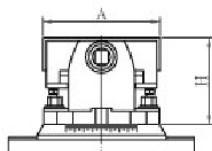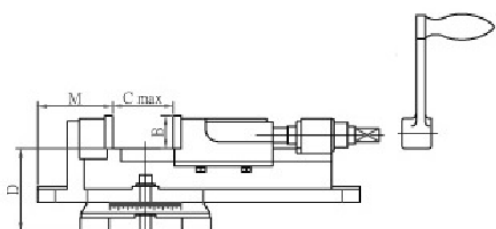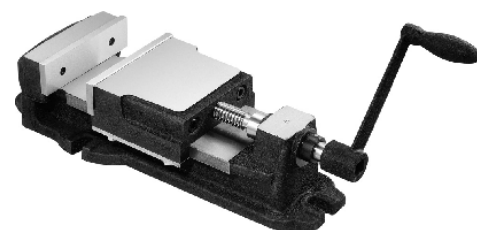

Dimensions en mm										Force en daN	Poids en kg
A	B	C	E	E1	F	G	H	L	M		
104	36	62	293	310	13	145	83	15	65	900	9
130	37	82	362	384	13	172	97	15	84	900	15
152	43	112	442	473	15	209	108	16,5	90	1000	26
204	63	149	579	609	18	312	148	21	122	1400	53

Exemple de commande:

Étau machine BASIC

SAV 233.99BASIC - 104

Désignation

SAV N° - A

ETAU MACHINE BASIC SUR BASE

SAV 233.99BASICS





Serrage mécanique

Utilisation :

Pour travaux de fraisage et perçage

Exécution :

- Corps en fonte
- Mors en acier trempé rectifié
- Base tournante

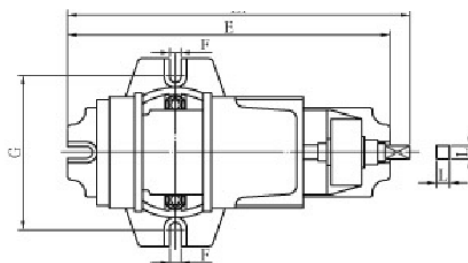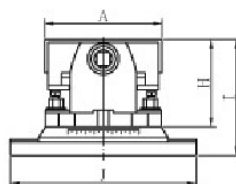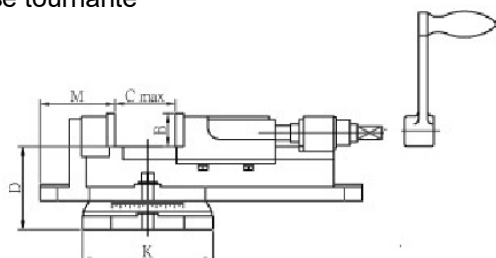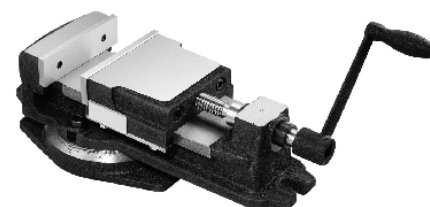

Dimensions en mm														Force en daN	Poids en kg
A	B	C	D	E	E1	F	G	H	I	J	K	L	M		
104	36	62	76	293	310	13	145	83	113	176	122	15	65	900	10
130	37	82	92	362	384	13	172	97	129	209	147	15	84	900	17
152	43	112	105	442	473	15	209	108	148	260	181	16,5	90	1000	28
204	63	149	127	579	609	18	312	148	190	350	234	21	122	1400	56

Exemple de commande:

Étau machine BASICS

SAV 233.99BASICS - 104

Désignation

SAV N° - A